

STUDYING THE CMS ECAL TRIGGER AT THE CERN LHC

Kirsten Randle
Prof. Toyoko Orimoto

THE ELECTROMAGNETIC CALORIMETER

- The Compact Muon Solenoid (CMS) detects proton-proton collisions at the CERN LHC
- CMS is made up of several layers that study different properties of particles
- The Electromagnetic Calorimeter (ECAL) is the layer that is sensitive to photons and electrons.

THE ELECTROMAGNETIC CALORIMETER

- Electrons and photons impinging on the crystals produce electromagnetic showers in lead tungstate (PbWO_4) crystals
- Scintillation light is collected by photodetectors, and signal is amplified, digitized, and shaped
- Information about the light pulse is used by the Level I trigger to quickly decide (online) if an event should be saved for further offline study

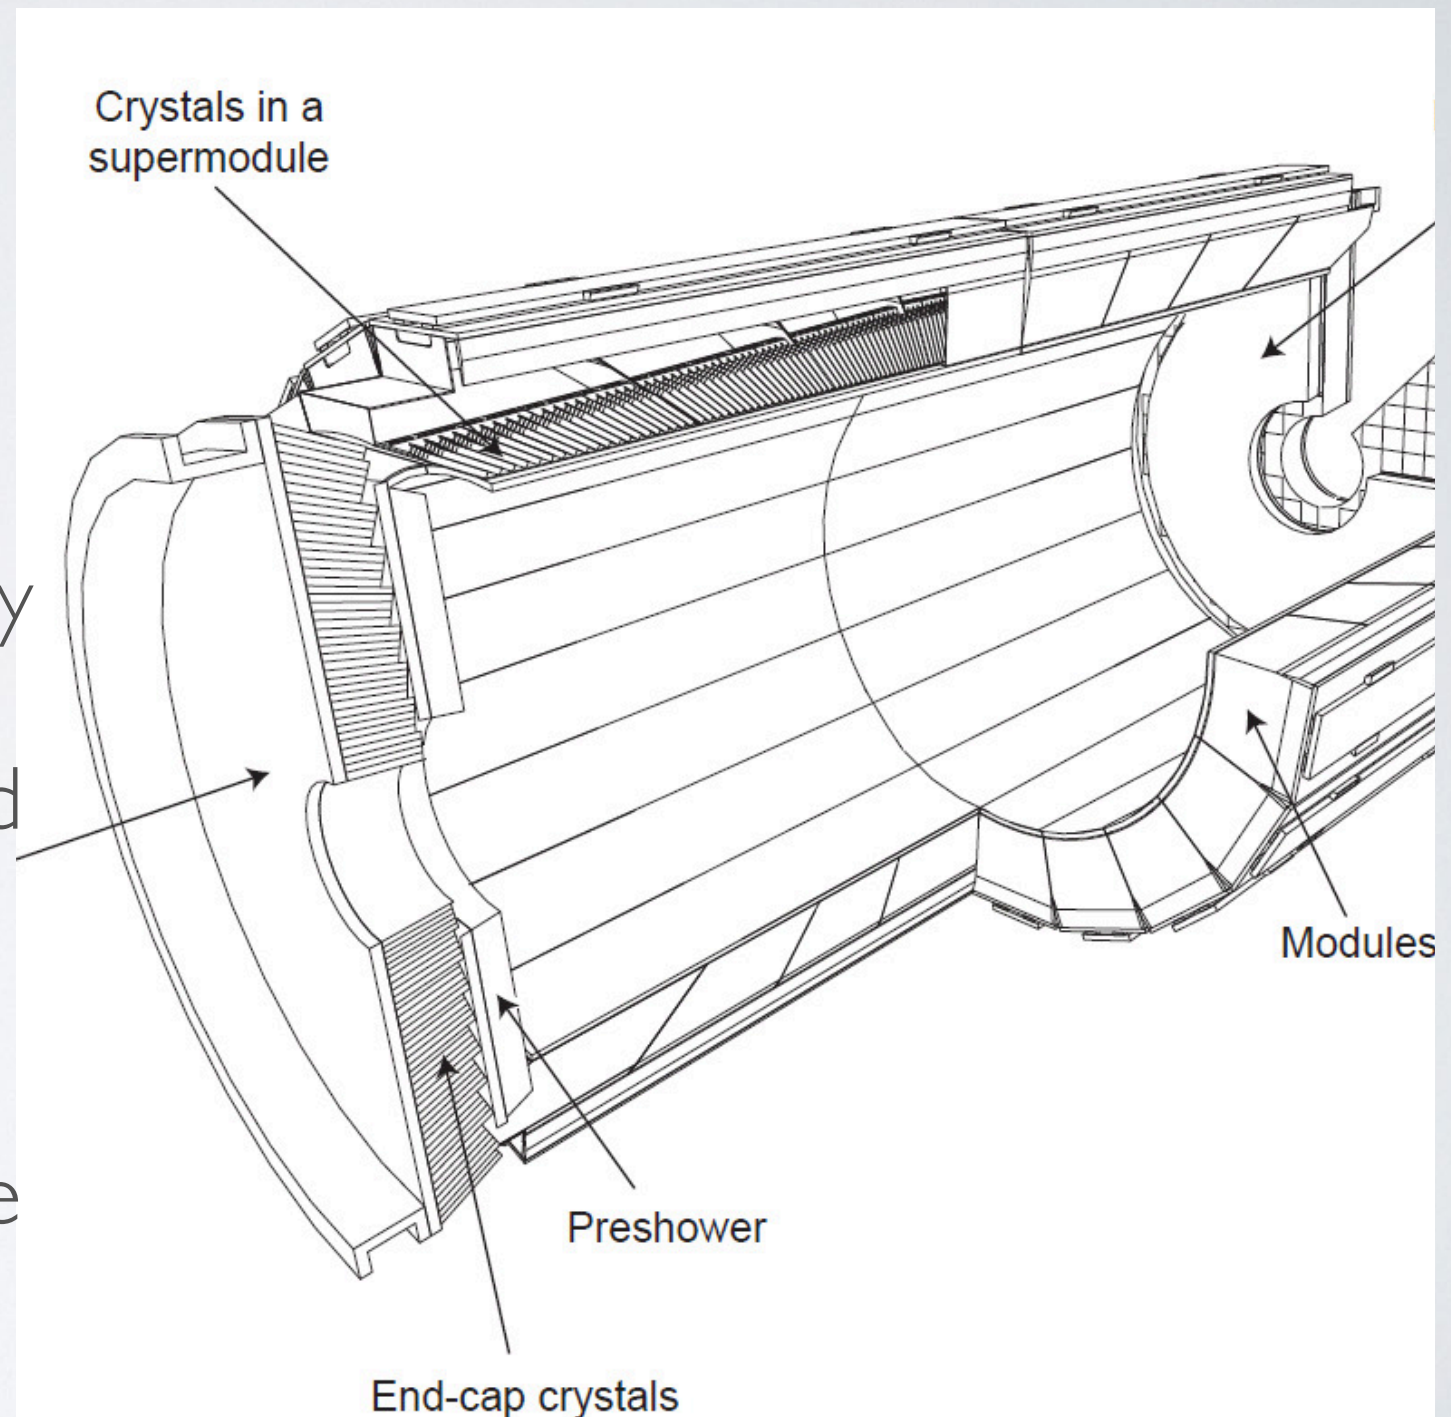


Image courtesy CMS Collaboration

ENERGY RECONSTRUCTION OF SIGNALS

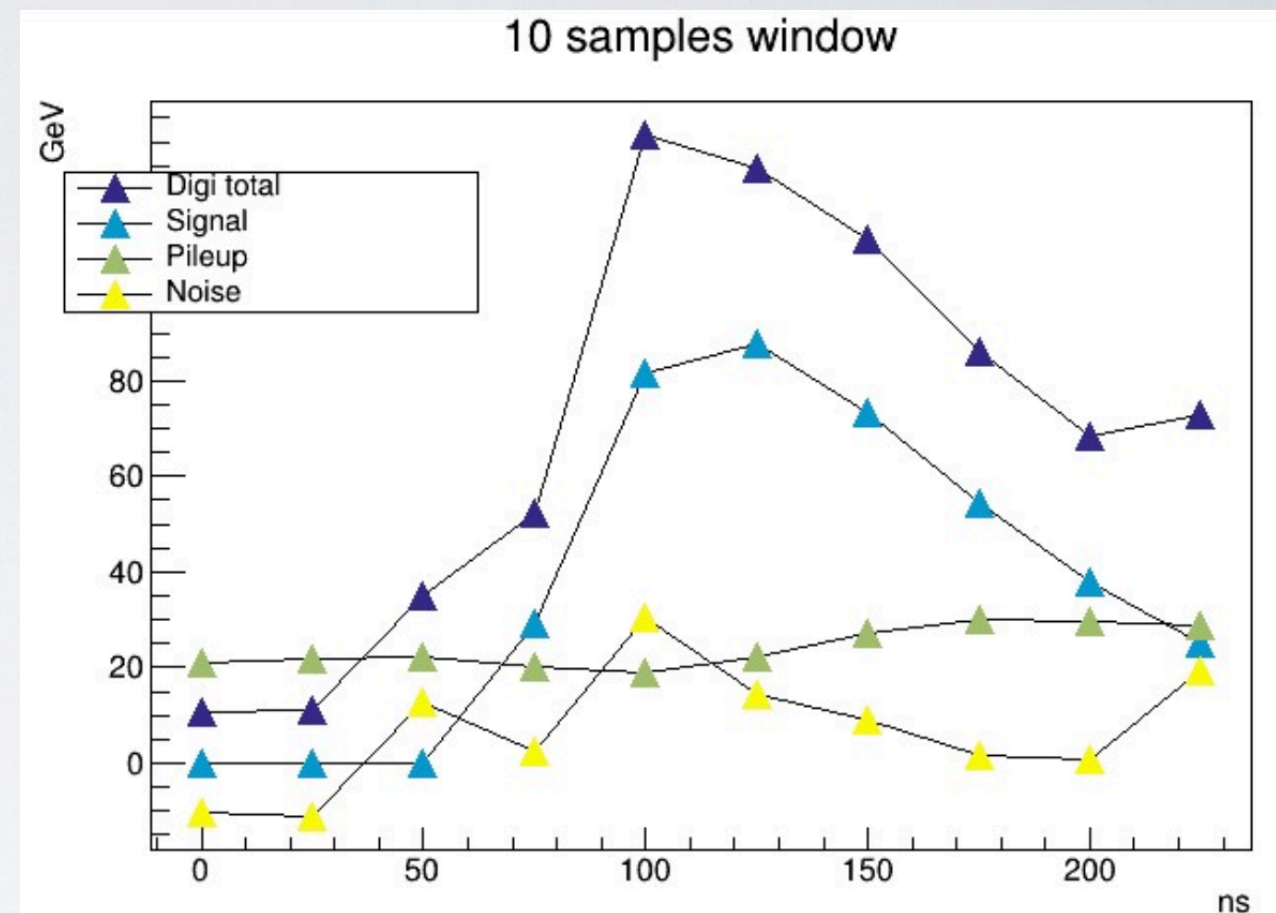
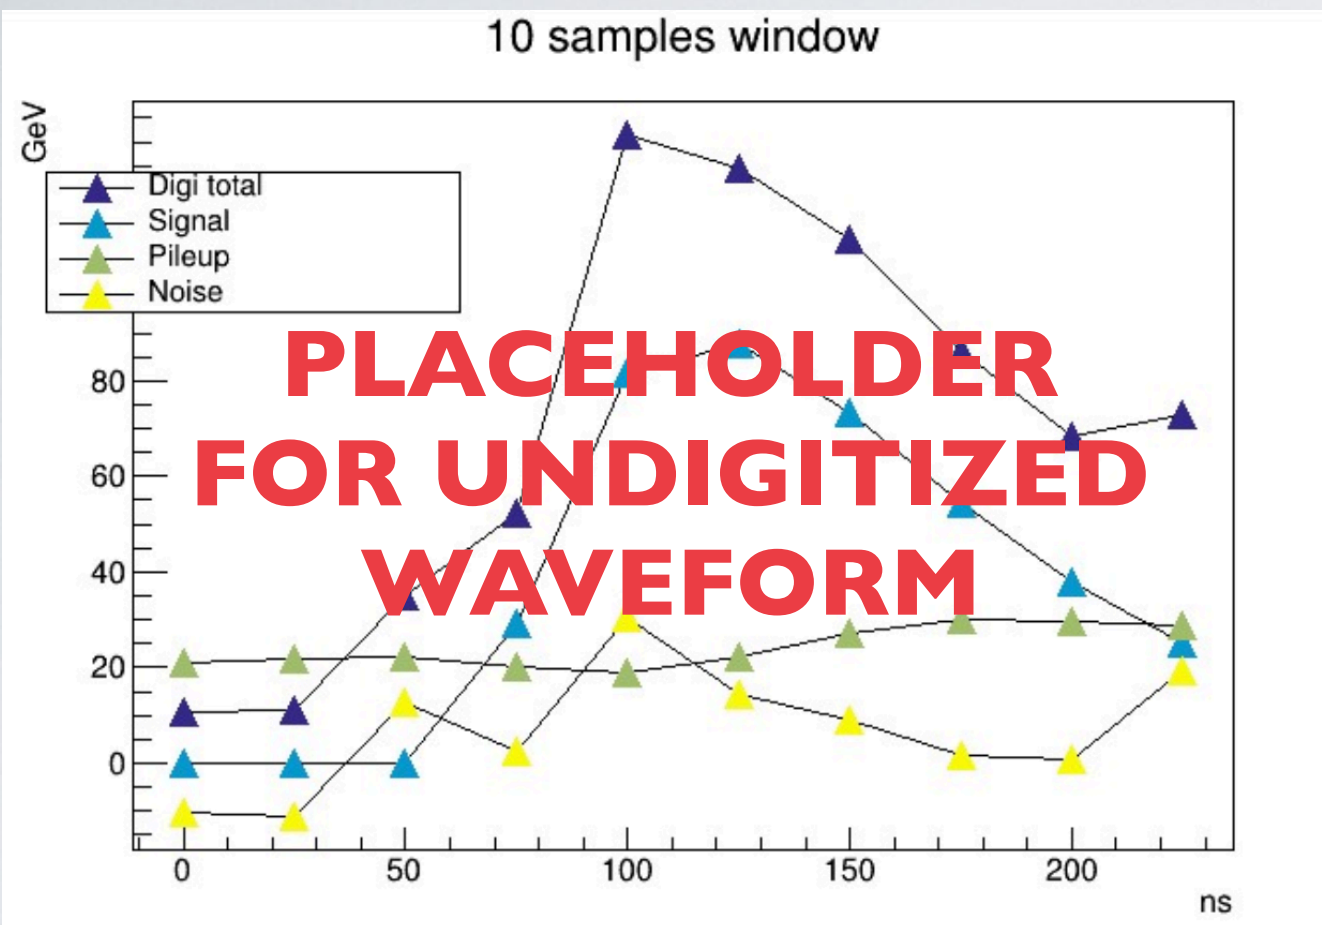


Image courtesy A.Tishelman-Charny

- Accurate & precise signal energy reconstruction is necessary for triggering
- For every window of 10 samples (taken every 25ns by onboard electronics), each sample is multiplied by an assigned weight for energy reconstruction
- Initial Run2 studies have shown that weights are not ideal and can be improved

WEIGHTS

- Amplitude weights
 - active, uniform for whole detector
 - Current study: update weights and vary weights for different parts of the detector
- Timing weights
 - very front end readout electronics have unused capacity for second set of weights
 - Current study: optimize timing weights to identify out-of-time pileup in a signal

PILEUP

- Bunches of protons meet inside the detector every 25 ns, this is called a Bunch Crossing (BX)
- Scintillation in the detector takes much longer than this (10 samples, 250 ns)
- Pieces of signals from other bunch crossings can add to overall amplitude
- Out-of-time pileup not only changes the amplitude but also the pulse shape

SCOPE OF PROJECT

- Get ROOT and pyROOT running
- Write a flexible plotter that uses ROOT
- Produce interesting of plots of various parameters used to study the amplitude and timing weights from simulated data

PLOTTER

- Plotter is split into 2 layers to separate time-heavy processes for ease of use
- ROOT libraries are used for power to deal with large datasets
- First layer takes data and produces histogram objects and saves them to a file that can be accessed for the second layer
- Second layer takes histogram objects and plots them, since second layer runs quickly it can be tweaked easily
- Flexibility makes changes to cuts, studying different parameters, or repeating the same studies on different data sets easy



```

65 def create_1Dhisto(bias_tree, histo_name, binparams, parameter, cuts):
66     h = TH1F(histo_name, parameter, binparams[0], binparams[1], binparams[2])
67     h.GetXaxis().SetTitle(parameter)
68     h.GetYaxis().SetTitle('Entries')
69     drawstatement = parameter + ' >> ' + histo_name
70     bias_tree.Draw(drawstatement, cuts, 'hist')
71     h.SetDirectory(0)
72     return h
73
74 def create_2Dhisto(bias_tree, histo_name, binparams, parameters, cuts):
75     h =
76         TH2F(histo_name, histo_name, binparams[0][0], binparams[0][1], binparams[0][2], binparams[1][0], binparams
77             [1][1], binparams[1][2])
78     h.GetXaxis().SetTitle(parameters[0])
79     h.GetYaxis().SetTitle(parameters[1])
80     drawstatement= parameters[1] + ':' + parameters[0] + ' >> ' + histo_name
81     bias_tree.Draw(drawstatement, cuts, 'COLZ1')
82     h.SetDirectory(0)
83     return h
84
85 def slicefty(histo, func, slicebins, options):
86     fitparams = TObjArray()
87     histo.FitSlicesY(func, slicebins[0], slicebins[1], slicebins[2], options, fitparams)
88     return fitparams
89
90 def iterate_curves(tree, curvelist, type):
91     list = [0 for x in range(len(curvelist))]
92     for i, p in enumerate(curvelist):
93         if type == 'TH1F':
94             list[i] = create_1Dhisto(tree, p[0], p[2], p[3], p[4])
95         if type == 'TH2F':
96             list[i] = create_2Dhisto(tree, p[0], p[2], p[3], p[4])
97     return list

```


SIMULATED SIGNALS

Digis statistics BX0==15

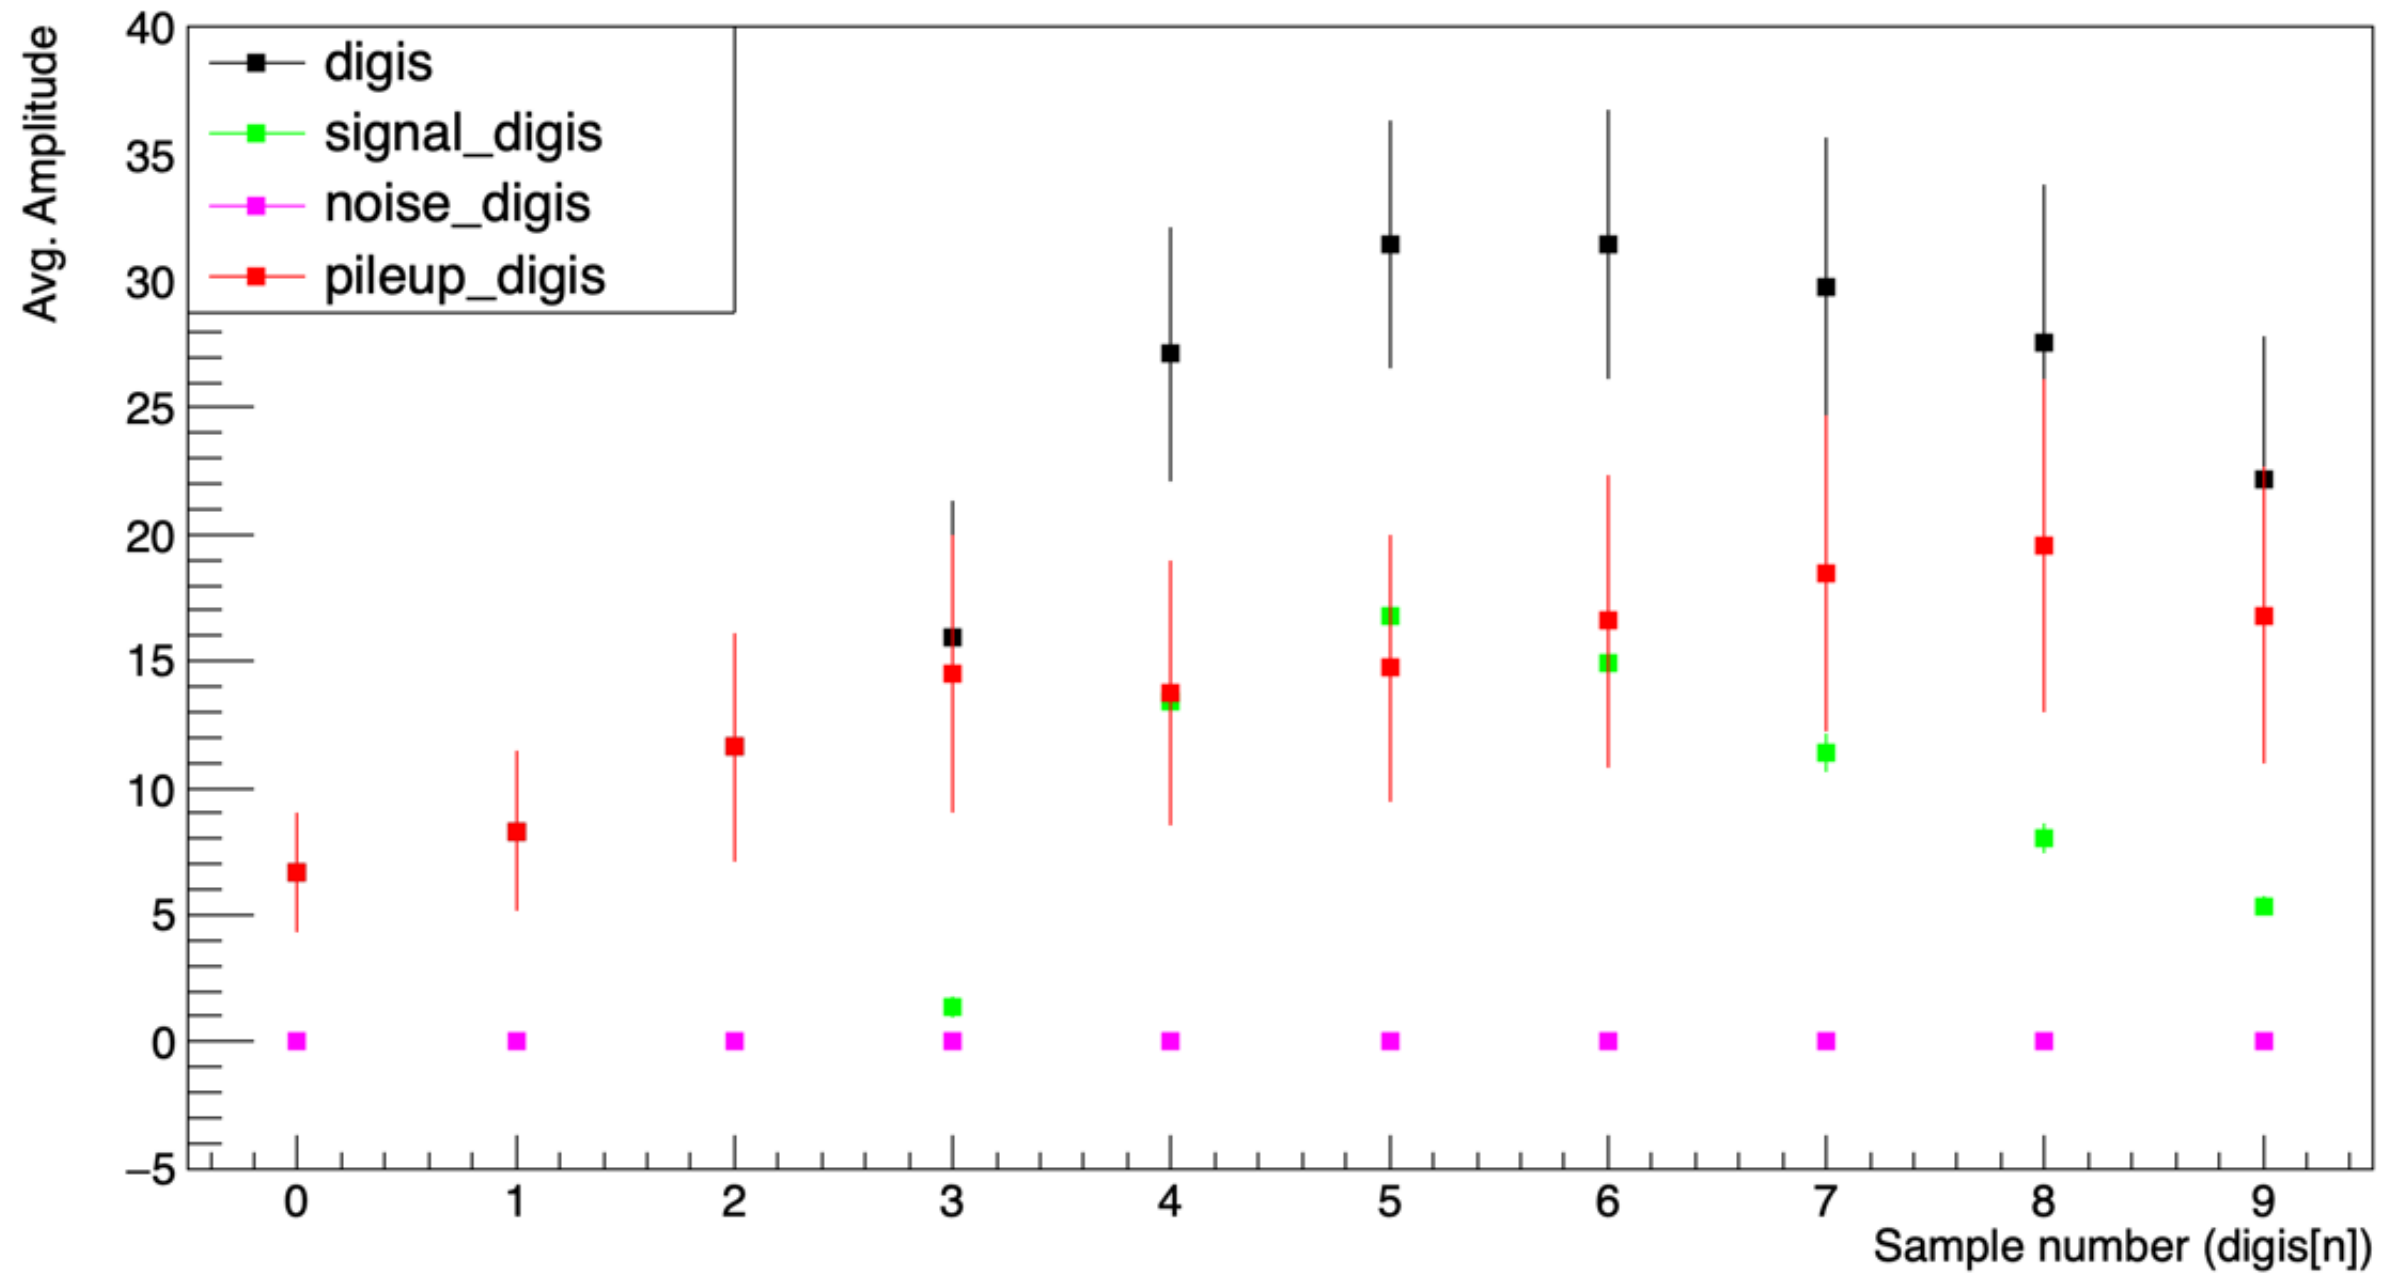


WEIGHTS

- The model uses the 'true' amplitude to choose the weights that accurately reconstruct the amplitude for each event
- The model similarly chooses the timing weights that reconstruct the amplitude to zero for each event

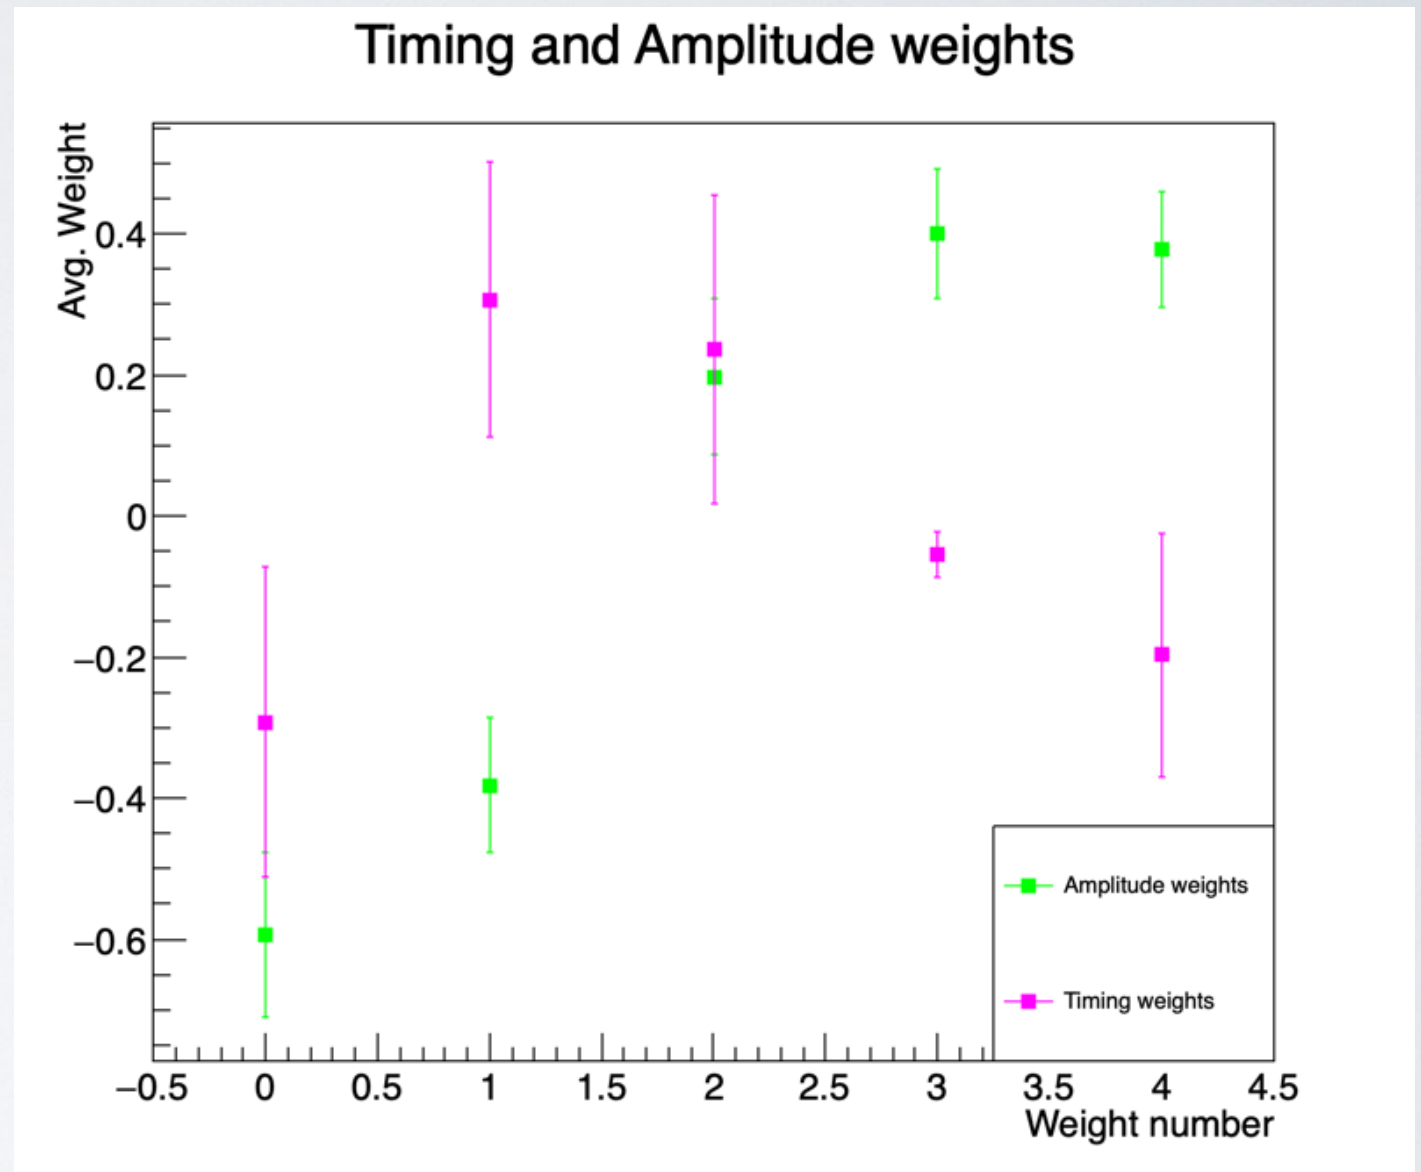


WEIGHTS EFFECTS ON AMPLITUDE

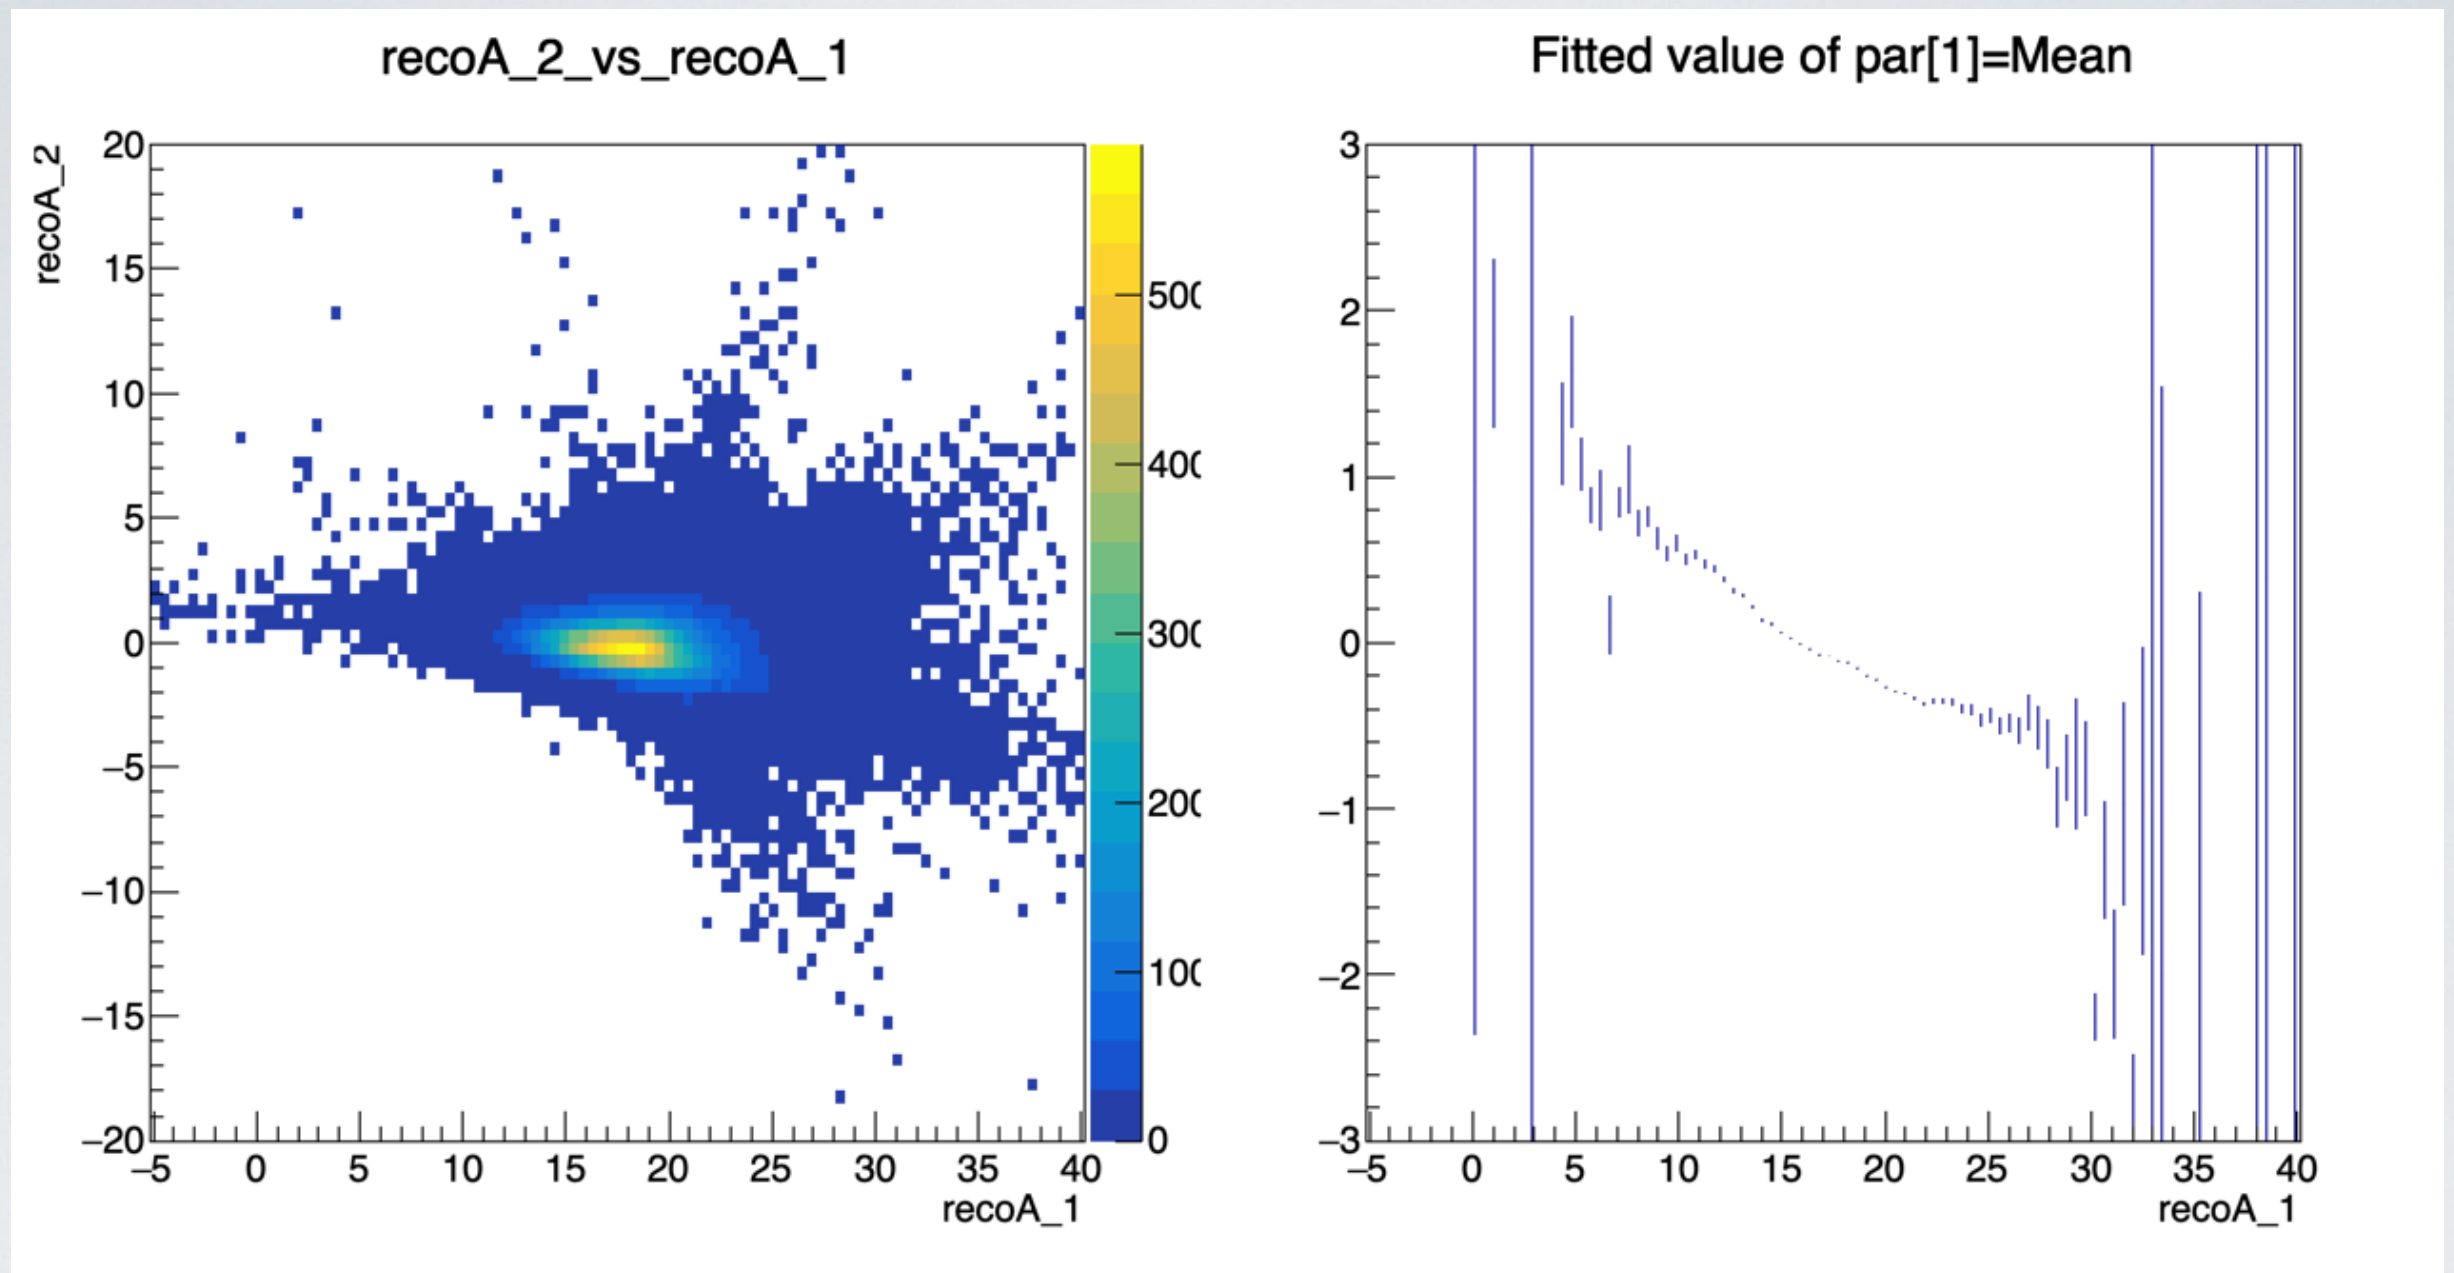

Apparent correlation of reconstruction amplitudes

Right Side uses a ROOT method for 2-D histograms that finds the average value of the y_2 -distribution in each x bin

WEIGHTS EFFECTS ON AMPLITUDE

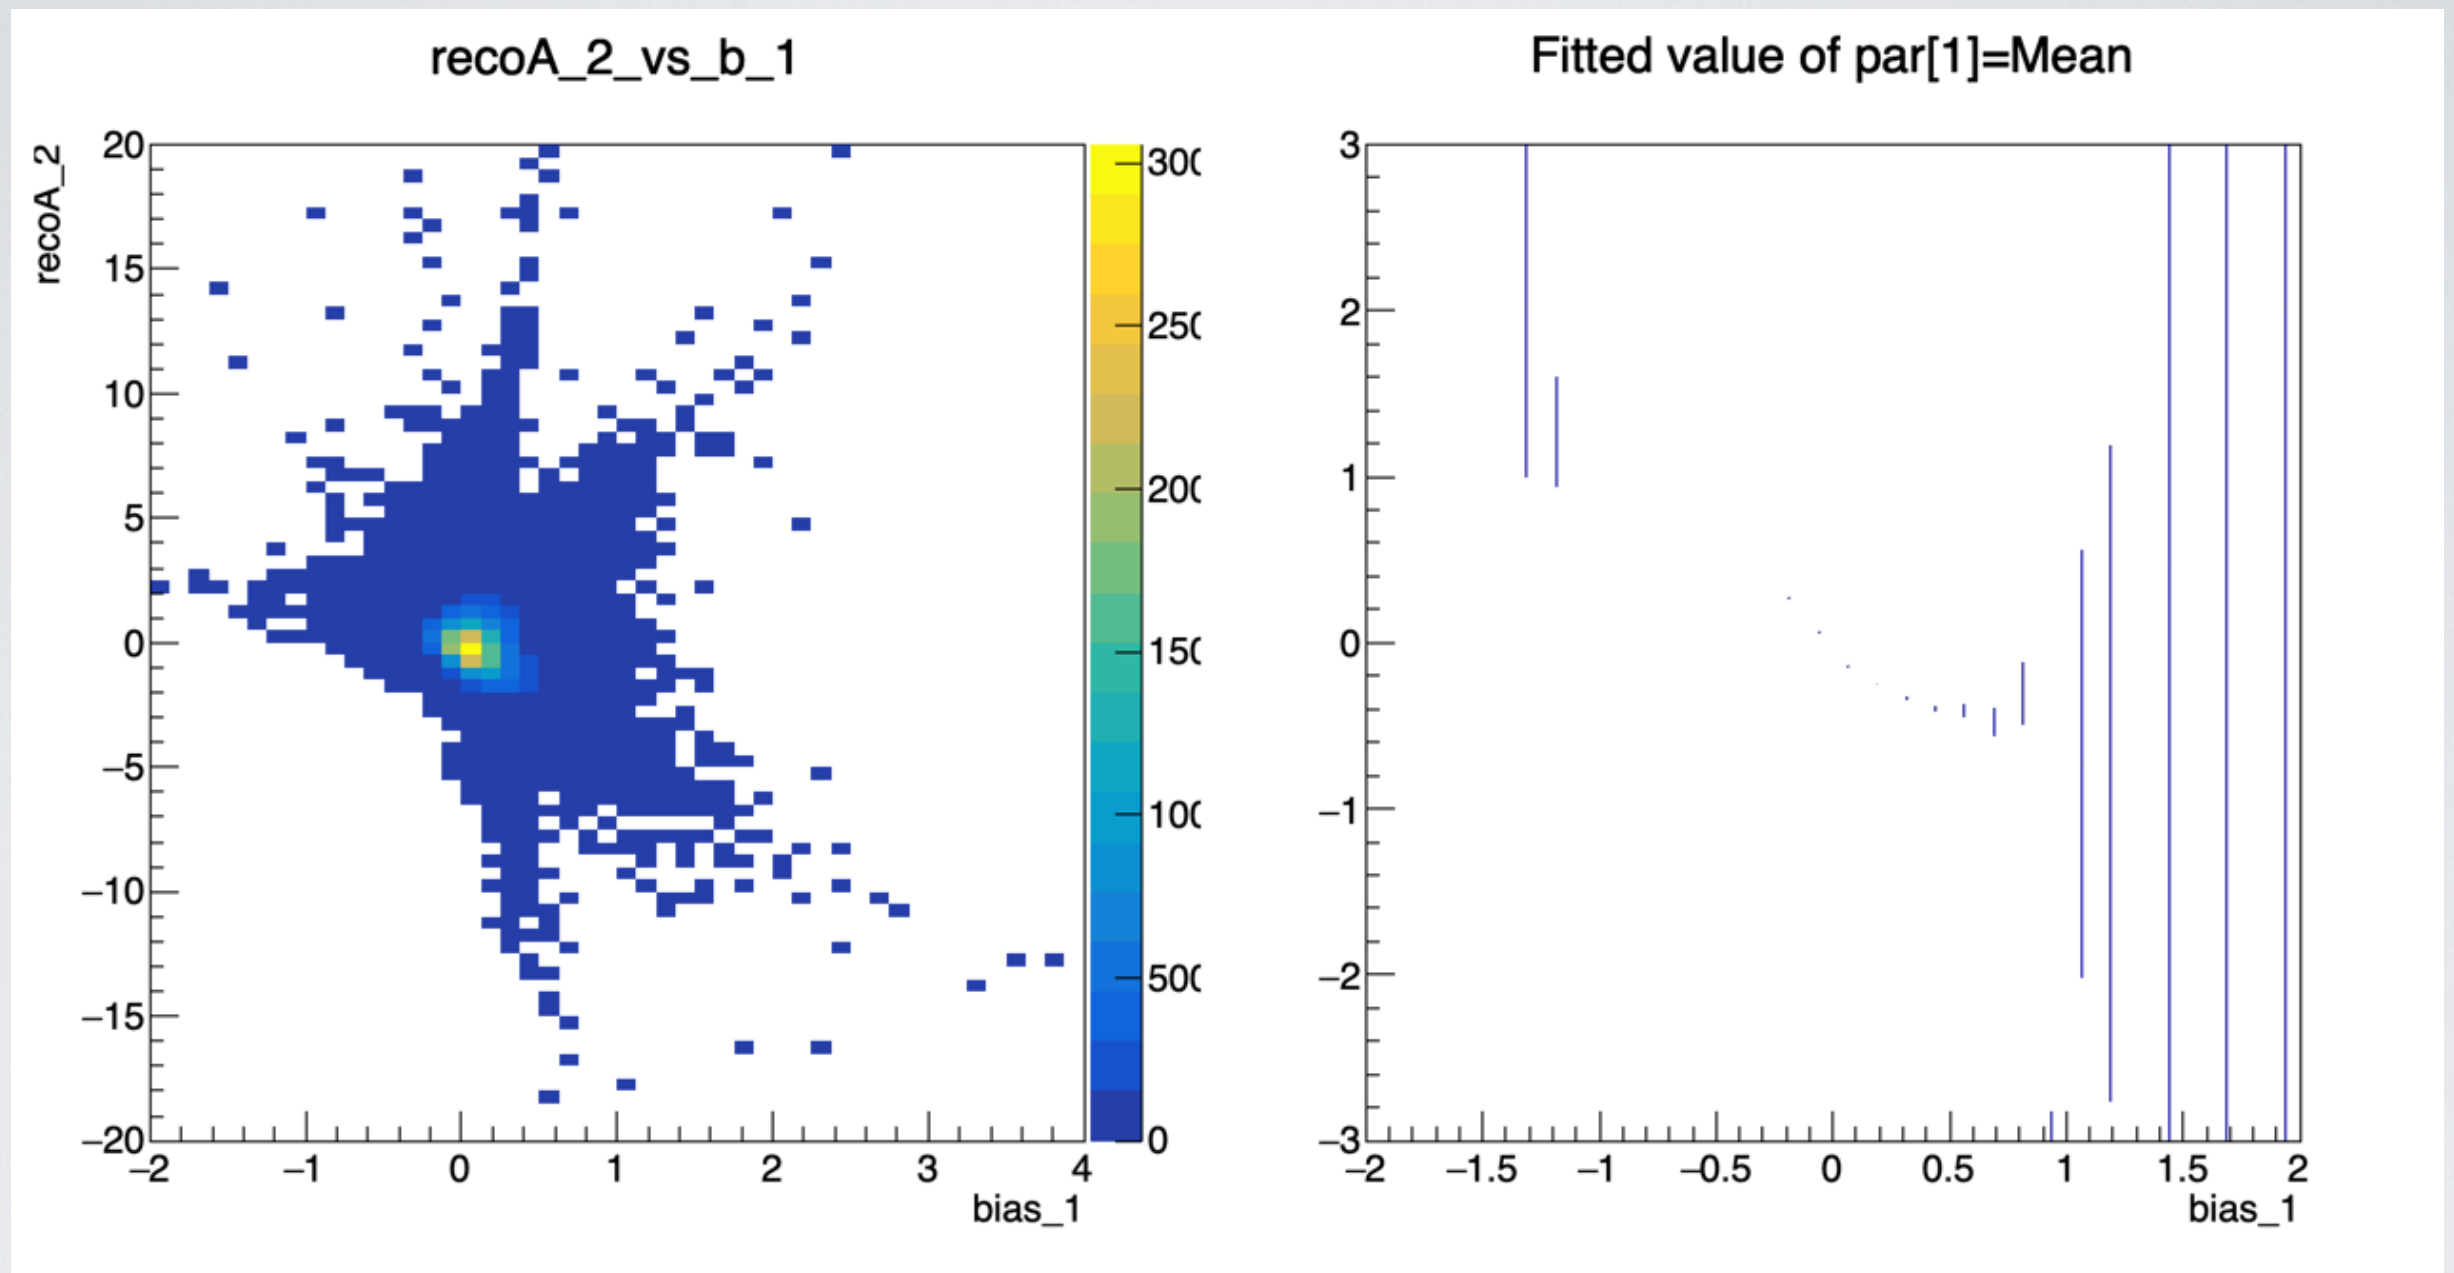

bias, a metric for accuracy of energy reconstruction, shows that when recoA_1 fails, recoA_2 also doesn't behave as expected

FUTURE DIRECTIONS

- Determine what types of events are failing to produce appropriate timing weights (recoA are far from expected values)
- Quantify in which sample high pileup affects amplitude reconstruction the most
- Study failure modes for amplitude weight failure, specifically the pileup dependence
- Examine Timing weight's ability to identify out-of-time pileup